


AF08

"AF08": SOFTWARE FOR 3590E INDICATORS FOR WHEEL WEIGHING SYSTEMS WITH VARIOUS PADS

SISTEMA PESARUOTE

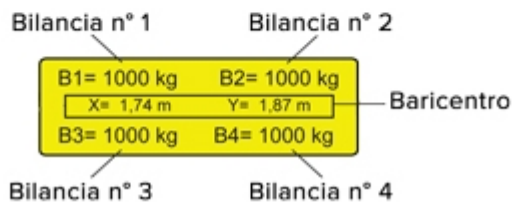

Suitable for creating wheel weighing and static axle weighing systems, or to weigh objects with various resting points. Ideal for weighing and calculating the centre of gravity coordinates of the vehicles, trucks, airplanes, containers, etc. Simultaneous display of the weight of each connected pad and of the sum. CE-M approved (OIML R-76 / EN 45501).

The best solution
for advanced industrial
applications

FUNCTIONS

- Clearing cycle of all the connected pads.
- Wheel weighing multi scale functioning mode, with up to 16 connectable 350-Ohm load cells and up to 4 independent reading channels available (for 4 pads).
- Static axle weighing functioning mode, up to 2 reading channels, with manual acquisition of the weight of each axle through dedicated key.
- Calculation of the x and y coordinates of the centre of gravity (for wheel weighing mode).
- Cancellation of the last weigh made.
- Quick selection of the number of active reading channels of the weight (up to 4, independent), for configuring the instrument depending on the number of resting points of the vehicle to be weighed.
- 3 zeroable total levels and printable in an independent way:
 - vehicle total
 - vehicles' total
 - grand total.
- Semi-automatic tare (for wheel weighing mode).
- Presetable tare, subtracted from the sum weight of the single wheels in the wheel-weighing mode or from the total weight of the vehicle in the axle-weighing mode.
- Selection of displayed data on the graphic LCD display (totals, progressives, weight...).
- Simultaneous display of the weight on each pad (up to 4 independent channels) and of the total weight.
- Thanks to the 3590EKR series indicator combined with a radio module, it is possible to manage up to 16 WWSRF pads fitted with built-in radio module, with database management and calculation of the center of gravity.
- Completely configurable keyboard functions according to the customers' needs.
- 15 configurable and printable text ID's containing 32 characters, for example: Code, lot ID, operator ID, shift number, etc.
- Database of 1000 storages, with programmable modification password, each composed of 5 alphanumeric descriptions, for vehicle, client, or material management.
- Programmable printout from keyboard or from PC (through the free Dinitools.net software) of 30 print formats linkable to various functions; each print format may contain up to 2048 positions which may be ASCII codes or preconfigured print blocks (i.e. Company name, weight of each pad or axle, total weight, centre of gravity coordinates, etc.).
- Alibi memory for automatic storage of the total weight of the vehicle (only for wheel-weighing mode).
- Print and display list of last 3500 vehicles (in wheel weighing mode) or 3500 axles (in axle weighing mode), with possibility of cancellation.

APPROVAL WITH CE-M SERIES PAD

- The weight of the single pad is legal for trade.
- The total weight of the vehicle is legal for trade depending on the application:
 - The wheel weighing systems, with a number of pads equal to the number of vehicle's wheels, are approved, because the weight of the vehicle is determined in only one weigh.
 - The axle weighing systems are for internal use only.

DETAIL 1

LINEA 1 INTESTAZIONE	
LINEA 2 INTESTAZIONE	
LINEA 3 INTESTAZIONE	
....	
VEICOLO: IVECO	
IMMATRICOLAZIONE: 123456	
TARGA: AB123CD	
OPERATORE: ALESSIO	
DATA: 10/10/2010 ORE 14:00	

RUOTA 1:	550kg
RUOTA 2:	550kg
ASSE 1:	1100kg
RUOTA 3:	550kg
RUOTA 4:	550kg
ASSE 2:	1100kg
TOTALE	2200kg

BARICENTRO	
x_g	1,74 m
y_g	1,87 m

Ticket example



www.diniargeo.com



“YOUR WORLDWIDE PARTNER FOR WEIGHING,”

DINI ARGEO
FRANCE sarl
Nogent-sur-Marne
info.fr@diniargeo.com

DINI ARGEO
GMBH
Sinsheim - Germany
info.de@diniargeo.com

DINI ARGEO
UK Ltd
Taunton - United Kingdom
info.uk@diniargeo.com

DINI ARGEO WEIGHING
INSTRUMENTS Ltd
Shanghai - China
info.cn@diniargeo.com

DINI ARGEO
WEIGHBRIDGES
Calto (RO) – Italy
info@diniargeo.com



HEAD OFFICE

Via Della Fisica, 20
41042 Spezzano di Fiorano Modena - Italy
Tel. +39.0536 843418 Fax. +39.0536 843521
info@diniargeo.com

SERVICE ASSISTANCE

Via Dell'Elettronica, 15
41042 Spezzano di Fiorano Modena - Italy
Tel. +39.0536 921784 Fax. +39.0536 926654
service@diniargeo.com



SALES AND TECHNICAL ASSISTANCE SERVICE